

#Jenny



Finally I get this ebook, thanks for all these I can get now!

#Rio



Cool! I'am really happy

#Markus Jensen



I did not think that this would work, my best friend showed me this website, and it does! I get my most wanted eBook

#Hun Tsu



wtf this great ebook for free?!

#Che Salsa



My friends are so mad that they do not know how I have all the high quality ebook which they do not!

#Diego Butler



so many fake sites. this is the first one which worked! Many thanks

## 1. Appearance Description for PoE Wi-Fi Bridge

### 1. Front Panel

The front panel has the 2-button and status LEDs in the following figure.



Fig 1. Front View

Button	Description
WPS	<ul style="list-style-type: none"> <li>To connect WPS to AP(Access Point)</li> </ul>
Reset	<ul style="list-style-type: none"> <li>Reboot</li> <li>Reset to Factory Default</li> </ul>
LED	Description
Power	<ul style="list-style-type: none"> <li>Solid Yellow Green: Power on</li> <li>Off: Power is not supplied to the PoE Wi-Fi Bridge</li> </ul>
WLAN	<ul style="list-style-type: none"> <li>Solid Yellow Green: Wi-Fi Activity are in process</li> <li>Blinking Yellow Green: Wireless data is being sent or received</li> <li>Blinking Red: The Wireless signal is weak signal</li> <li>Off: Wi-Fi access fail</li> </ul>
DATA	<ul style="list-style-type: none"> <li>Blinking Yellow Green: Ethernet link is detected</li> <li>Off: No data transmission on the port</li> </ul>
CAMERA	<ul style="list-style-type: none"> <li>Blinking Yellow Green: CAMERA link is detected</li> <li>Off: No data transmission on the port</li> </ul>

Table 1. Front Description

[Download PDF version of :](#)  
Innotek User Manual